

Table of Contents

How to Use this Workbook 1

Vectorworks Concepts 3

2D, 3D AND HYBRID OBJECTS 3

GROUND PLANE AND WORKING PLANE 4

SNAP CONSTRAINTS AND SMARTCURSOR CUES 4

CLASSES AND LAYERS 5

SAVED VIEWS AND VIEWPORTS 5

RESOURCES 6

SYMBOLS 6

WALLS, FLOORS, AND ROOFS 6

PARAMETRIC OBJECTS 7

WORKSPACES 7

VECTORSRIPT 7

WORKSHEETS AND DATABASES 8

ANNOTATIONS 8

PLANTING PLANS 8

SITE MODELING 8

PAPERWORK 9

Getting Started in Vectorworks 11

VECTORWORKS SETTINGS 11

TERMINOLOGY 12

VECTORWORKS DRAWING WINDOW - MACINTOSH 14

VECTORWORKS DRAWING WINDOW - WINDOWS 15

OBJECT STACKING 21

ROTATE PLAN 22

Basic Object Creation 23

METHODS OF DRAWING OBJECTS 23

2D DRAWING TOOLS 26

METHODS OF EDITING OBJECTS 28

Using Snap Constraints 37

SMARTCURSOR SETTINGS & SNAPS 37

SNAP TO GRID 37

SNAP TO OBJECT 38

TABLE OF CONTENTS



CONSTRRAIN ANGLE 39

SNAP TO INTERSECTION 40

SMART POINTS 40

SNAP TO DISTANCE 41

SMART EDGE 42

CONSTRRAIN TANGENT 42

SNAP CONSTRAINT SHORTCUTS 43

The Attributes Palette 47

APPLYING ATTRIBUTES 47

FILL SETTINGS 47

PEN SETTINGS 49

LINE WEIGHT AND STYLE 50

MARKERS 50

EYEDROPPER TOOL 51

COLOR PALETTES 52

Vectorworks Resources 57

USING THE RESOURCE BROWSER 57

RESOURCE LIBRARIES 59

CREATING AND USING HATCHES 61

GRADIENTS 66

IMAGE FILLS 67

Text 69

CREATING AND FORMATTING TEXT 69

TEXT ALONG PATH 71

CALLOUT TOOL 73

Annotations 75

THE CALLOUT NOTES DATABASE 75

DRAWING MARKERS 79

CUSTOM TITLE BLOCKS 90

Dimensioning Tools and Preferences 97

DIMENSION TOOLS 97

DIMENSION PREFERENCES 99

| | |
|---|------------|
| 3D Viewing Tools | 101 |
| STANDARD VIEWS MENU | 101 |
| PROJECTION MENU | 102 |
| PERSPECTIVE MENU | 103 |
| SET 3D VIEW | 104 |
| ROTATE 3D VIEW | 104 |
| VIEWING TOOLS ON THE 3D TOOL SET | 105 |
| 3D Modeling Methods | 109 |
| CREATING 3D SOLIDS FROM 2D SHAPES | 109 |
| DRAWING DIRECTLY IN 3D | 113 |
| CONVERTING OBJECTS TO 3D | 114 |
| BOOLEAN OPERATIONS | 115 |
| CHAMFERS, FILLETS, AND SHELLS | 116 |
| NURBS CURVES | 118 |
| NURBS SURFACES | 120 |
| HYBRID OBJECTS | 126 |
| PARAMETRIC OBJECTS | 126 |
| Working Planes | 131 |
| USING WORKING PLANES | 131 |
| SET WORKING PLANE TOOL | 132 |
| MOVING AND ROTATING THE WORKING PLANE | 134 |
| THE WORKING PLANES PALETTE | 134 |
| ALIGN PLANE TOOL | 134 |
| Rendering Modes | 135 |
| RENDERWORKS | 137 |
| Lighting | 139 |
| LIGHT CREATION TOOL | 140 |
| SET LAYER AMBIENT | 142 |
| SET SUN POSITION | 143 |
| File Organization | 145 |
| CREATING AND EDITING CLASSES | 145 |
| DRAWING WITH CLASSES | 149 |
| CLASSES IN SYMBOLS AND GROUPS | 150 |

| | |
|--|------------|
| USING LAYERS | 151 |
| VIEWPORTS..... | 158 |
| DESIGN LAYER VIEWPORTS | 163 |
| SECTION VIEWPORTS | 167 |
| USING SAVED VIEWS | 169 |
| Architect File Structures | 173 |
| ARCHITECT SETUP COMMANDS | 173 |
| CUSTOMIZED NAMING STANDARDS | 183 |
| Symbols | 187 |
| CREATING 2D SYMBOLS | 187 |
| INSERTING SYMBOLS | 190 |
| The Space Object..... | 199 |
| USING THE SPACE TOOL..... | 199 |
| SPACE OBJECT PROPERTIES | 201 |
| SPACES FROM POLYLINES..... | 206 |
| WALLS FROM SPACES | 207 |
| USING SPACES OBJECTS..... | 207 |
| ROOM FINISHES | 208 |
| GENERATING AREA REPORTS | 210 |
| Drawing Walls | 217 |
| CREATING WALLS | 217 |
| ROUND WALL TOOL..... | 223 |
| USING WALL STYLES..... | 224 |
| DRAWING WALLS | 226 |
| JOINING WALLS..... | 227 |
| EDITING WALLS..... | 229 |
| WALLS, SYMBOLS AND PARAMETRIC OBJECTS..... | 234 |
| WALLS IN 3D DRAWINGS | 234 |
| WALLS FROM OTHER GEOMETRY | 236 |
| Doors and Windows..... | 239 |
| DOOR AND WINDOW TOOLS | 239 |
| Roofs | 255 |
| ROOF OBJECTS | 255 |
| ROOF FACES | 265 |
| OTHER ROOF TYPES | 268 |

| | |
|---|------------|
| Schedules | 273 |
| DOOR AND WINDOW SCHEDULES | 273 |
| EDITING WORKSHEETS | 277 |
| EDITING OBJECTS FROM A WORKSHEET | 279 |
| | |
| Site Modeling | 281 |
| SITE MODEL SOURCE DATA | 281 |
| PREPARING 2D CONTOUR DATA | 284 |
| CONVERTING 2D CONTOURS TO 3D SOURCE DATA | 285 |
| CREATING A SITE MODEL | 288 |
| SITE MODEL PROPERTIES | 295 |
| SNAPSHOTS | 296 |
| SITE SECTIONS | 297 |
| MODIFYING THE SITE | 298 |
| OTHER SITE MODIFIERS | 302 |
| | |
| Printing | 309 |
| PAGE SETUP | 309 |
| DOCUMENT PREFERENCES | 312 |
| PRINTING | 313 |
| | |
| Configuring Vectorworks | 319 |
| VECTORWORKS PREFERENCES | 319 |
| VECTORWORKS PREFERENCES EDIT TAB | 319 |
| VECTORWORKS PREFERENCES DISPLAY TAB | 322 |
| VECTORWORKS PREFERENCES SESSION TAB | 325 |
| VECTORWORKS PREFERENCES 3D TAB | 328 |
| VECTORWORKS PREFERENCES AUTOSAVE TAB | 330 |
| VECTORWORKS PREFERENCES INTERACTIVE TAB | 331 |
| VECTORWORKS PREFERENCES USER FOLDERS TAB | 333 |
| DOCUMENT PREFERENCES DISPLAY TAB | 334 |
| DOCUMENT PREFERENCES | 334 |
| DOCUMENT PREFERENCES DIMENSION TAB | 335 |
| DOCUMENT PREFERENCES RESOLUTION TAB | 336 |
| OTHER APPLICATION SETTINGS | 337 |
| WORKSPACES | 340 |
| RESOURCE LIBRARIES | 344 |
| TEMPLATES | 347 |
| BACKING UP | 348 |

File Import 349
 IMPORTING DWG/DXF FILES 349
 MULTIPLE FILES 349
 DXF DWG IMPORT OPTIONS 350
 IMPORT PDF 354